

## **Obtaining Network Information**

### **PC -**

1. Open a Command Prompt
  - a. Start → Accessories → Command Prompt
2. Type “IPCONFIG”
3. This will give you the PC’s information.
4. Using your networking sheet, write down the IPv4 Address, Subnet Mask and Default Gateway.

### **Access Point**


1. Open a Command Prompt
  - a. Start → Accessories → Command Prompt
2. Type “NETSH WLAN SHOW INTERFACE”
3. This will give you the Wireless Network Information:

### **Projector**

1. In the projector, go to:
  - a. Menu → Advanced Menu → Network → Network Information

### Connecting a PC to a Projector Wirelessly

1. Make sure there is a connection from your PC to the Network (Access Point, Router, ETC.)
  - a. Please see above “Obtaining Network Information – PC”
2. Make sure your wireless USB Dongle is connected to your projector and is blinking.
3. Follow the above steps to obtain Access Point Information.
  - a. “Obtaining Network Information – Access Point”
  - b. Keep this information pulled up on your PC
4. Temporarily Connect an Ethernet (RJ45) Cable from your PC to your projector.
5. Obtain the Projectors IP Address (Wired Information)
  - a. Please see above “Obtaining Network Information – Projector”
6. Type the IP Address obtained from the Projector into the Web Browser on your PC. Select Projector Web Control.
7. Type in “Administrator” and leave the password blank. (This is the default, if changed, the customer must keep note of the User Name and Password they select.)

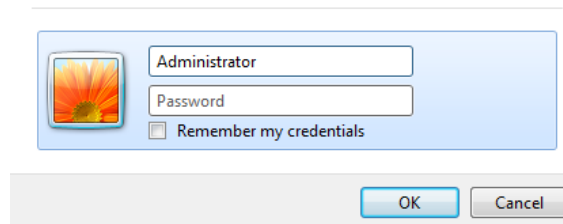

8. Ensure the DHCP is turned “ON”
  - a. The setting will also need to be the same on the Projector and PC. You can control this on the projector by going to:
    - b. Menu → Advanced Menu → Network → Setup
9. Enter in the SSID Information from the Command Prompt Screen. (See “Obtaining Network Information – Access Point”)
10. Authentication information from the Access Point should match the Encryption information on the Web Page.
11. Enter the Passphrase. This is the password to your Router (Access Point, Network, ETC.)
12. Click “Apply” on the bottom left hand side of the webpage.
13. Click “Reset Network” on the bottom left of the webpage.
14. Disconnect wired connection

## **Troubleshooting**

### **Verifying a Connection – Pinging the Projector from your PC**

1. On your PC:
  - a. Start → Accessories → Command Prompt
2. Type in “Ping (IP Address of Projector)” “ENTER”
  - a. Reply means it is connected.
  - b. Timed Out means it is not connected.
  - c. Destination Host unreachable means it is not connected.

**OR**

### **Verifying a Connection – Getting to PJ Control from your PC**

1. On your PC:
  - a. Open a Browser
2. Type in IP Address of the Projector into Browser’s Address Window
  - a. If the PJ Control webpage shows then you are connected.
  - b. If webpage cannot be displayed, then you are not connected